


Element

Design by BoConcept


Samlevejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

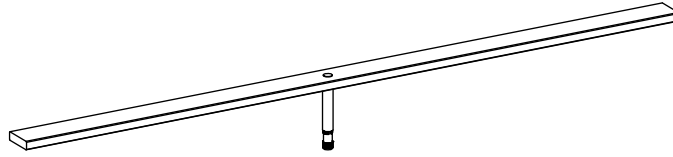


379-0021

Model 379-0021


007461




Model 379-0021
Fittingbox 930001251




B x 4
970001720




C x 1
970001711



D x 1
970001710



E x 1
970001712

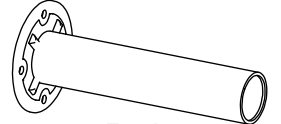

F x 1
970002215

FIG.
1




FIG.
2


100mm
125mm
150mm

100mm And 125mm

150mm

OR

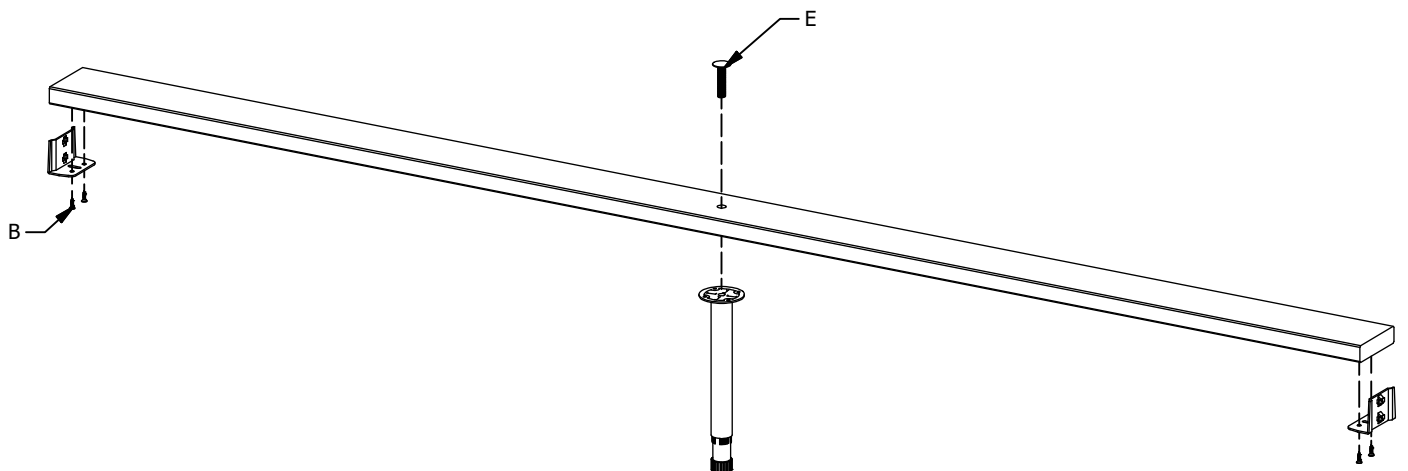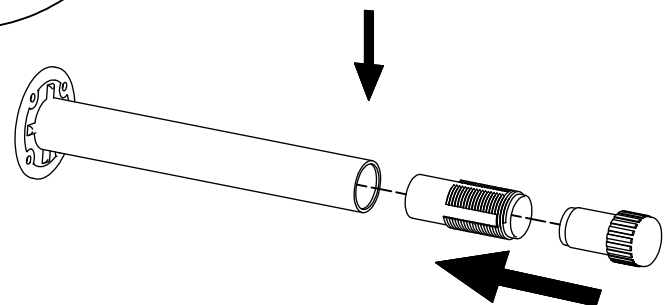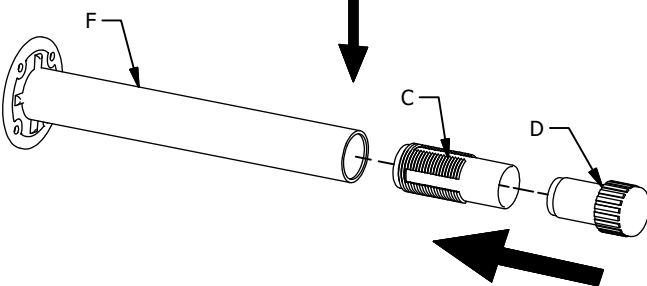

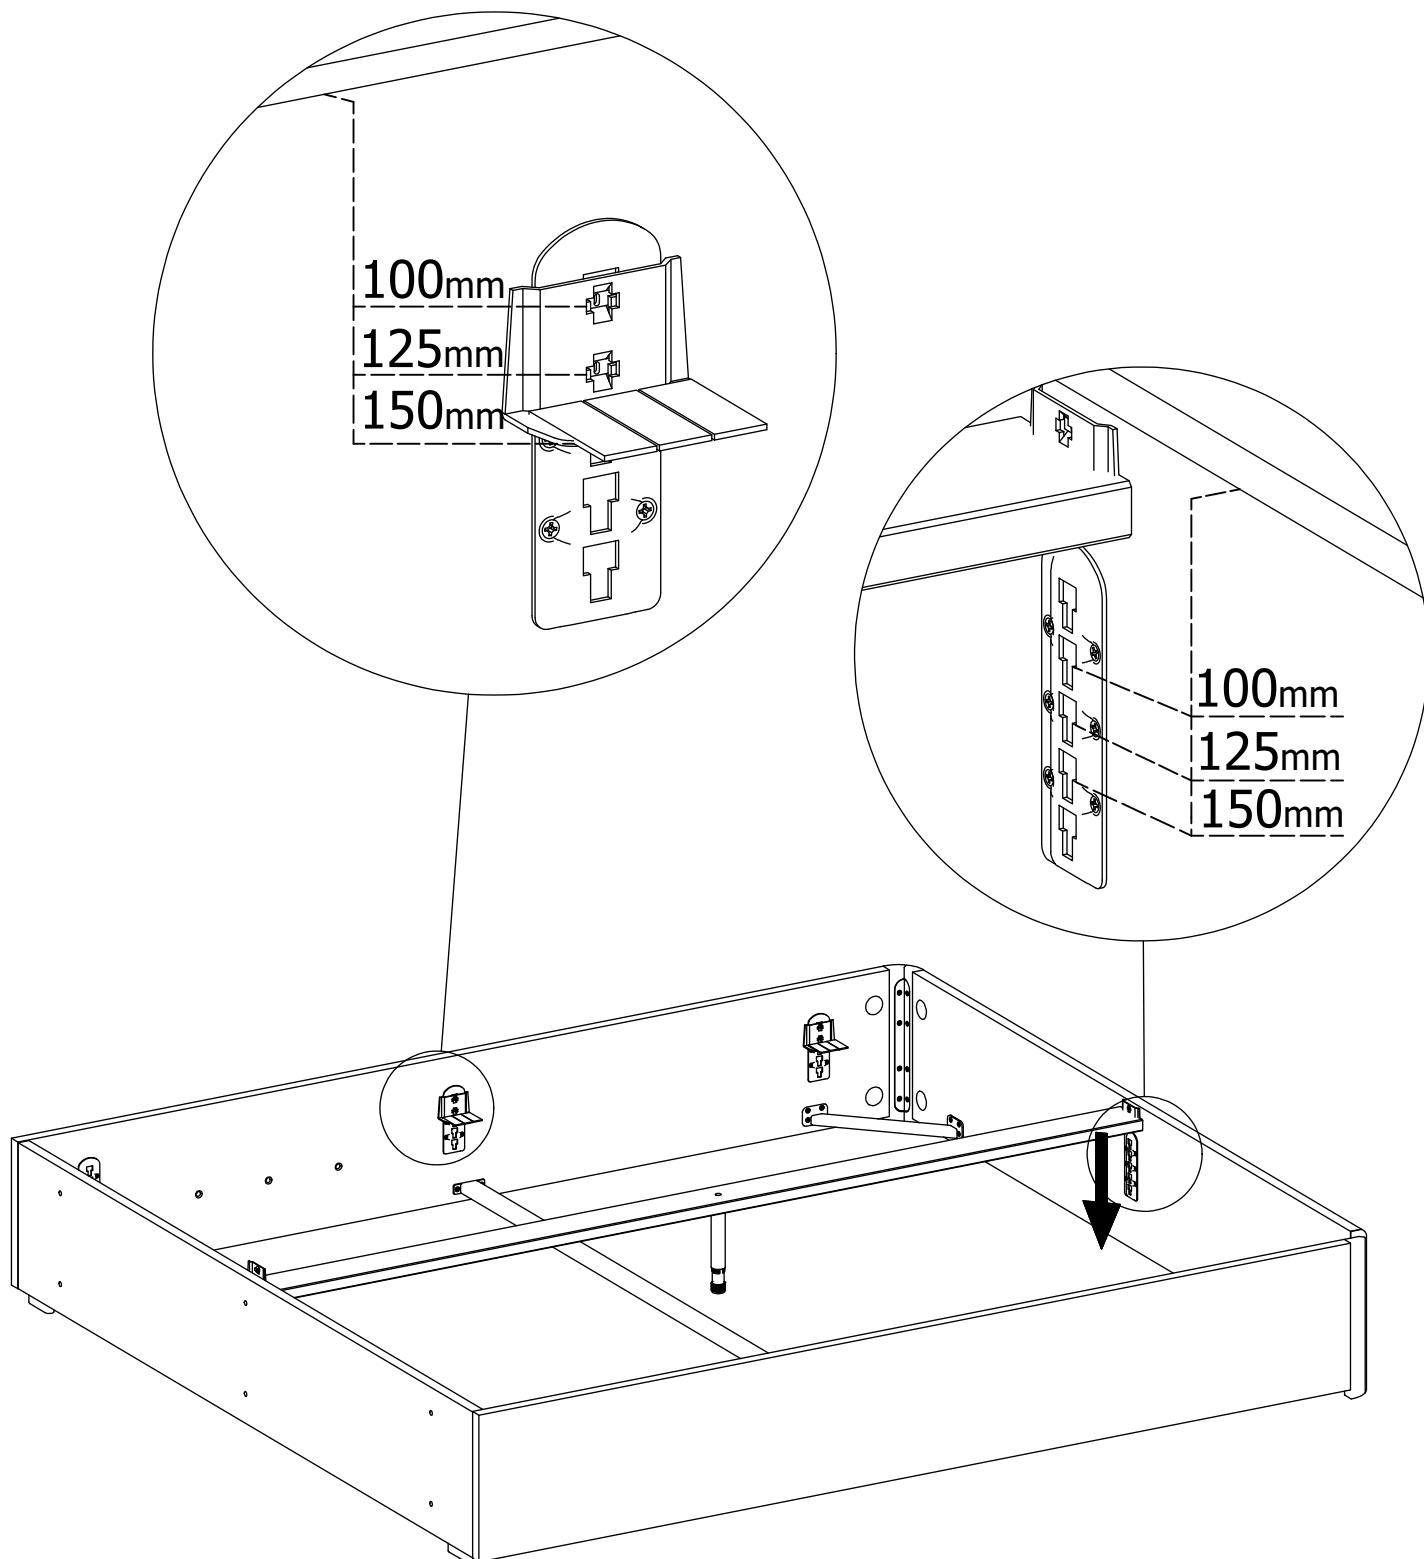

DK Ved reklamation oplyses følgende:

D Im Reklamationsfall, bitte folgendes erläutern:

US In case of claims, please state the following:

F En cas de réclamation, veuillez indiquer:

NL Bij service volgene mededelen


E En caso de reclamación, indicar lo siguiente:

P No caso de reclamação, por favor indique o seguinte:

JP お気づきの点等ございましたら、以下の点をお知らせください。

Example!

Korpus - Korpus - Carcase - Carcasse

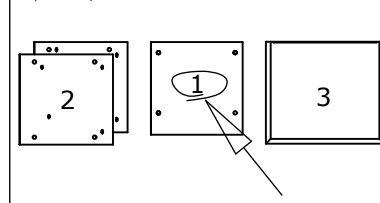

Beslag - Fittings - Beschläge - Set de Montage

