

# Princeton

Design by BoConcept

Samlevejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje


Eksempelkombinationer - Example combinations - Beispielkombinationen - Exemples d' combinaisons - Ejemplos de combinaciones




402-D172

71/46x160x52 Max 275kg.

400-2430

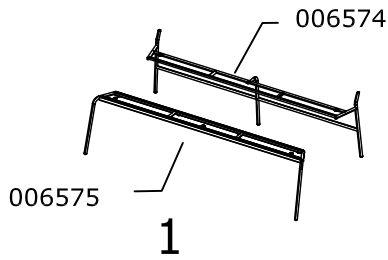

402-2550

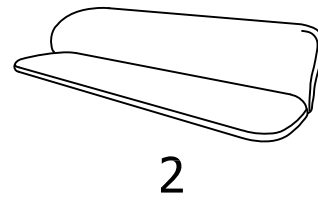

Beslag - Beschllge - Fittings - Set de montag  
Fitting bag 937000165



A x 10  
M6x18mm



B x 10  
D14 d6,5x1,5mm



C x 1  
4mm

FIG.  
1



A x 4



B x 4



C x 1

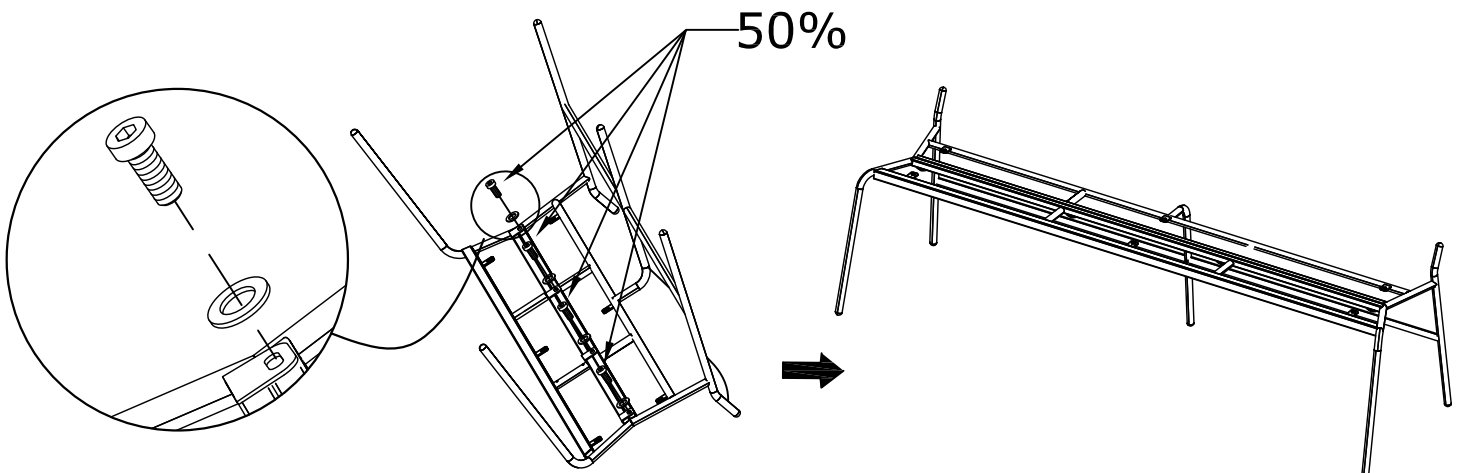
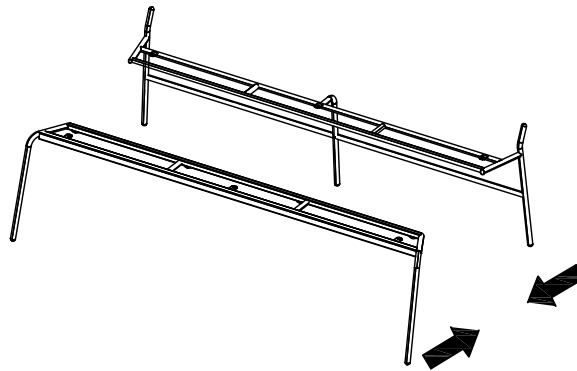


FIG.

2

 x2

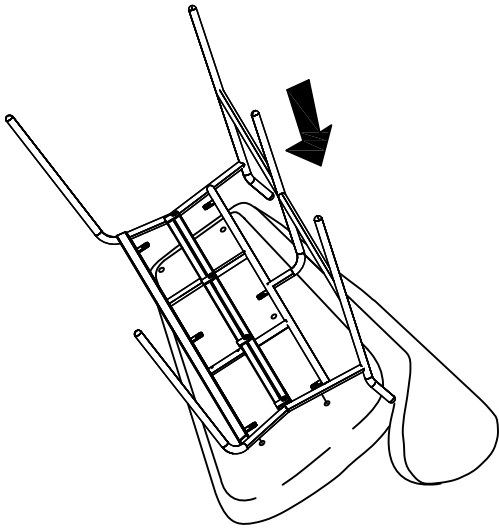


FIG.

3

 x2

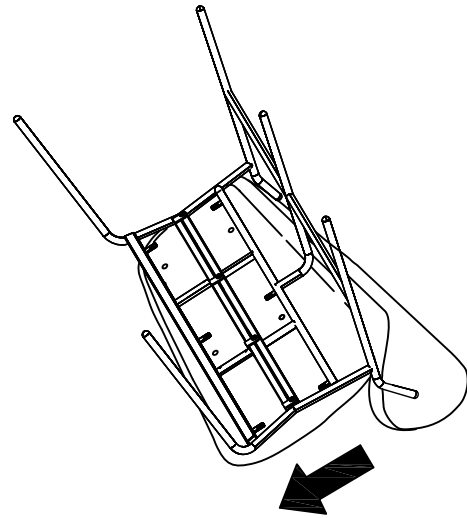


FIG.

4

 x2



A x 3



B x 3



C x 1

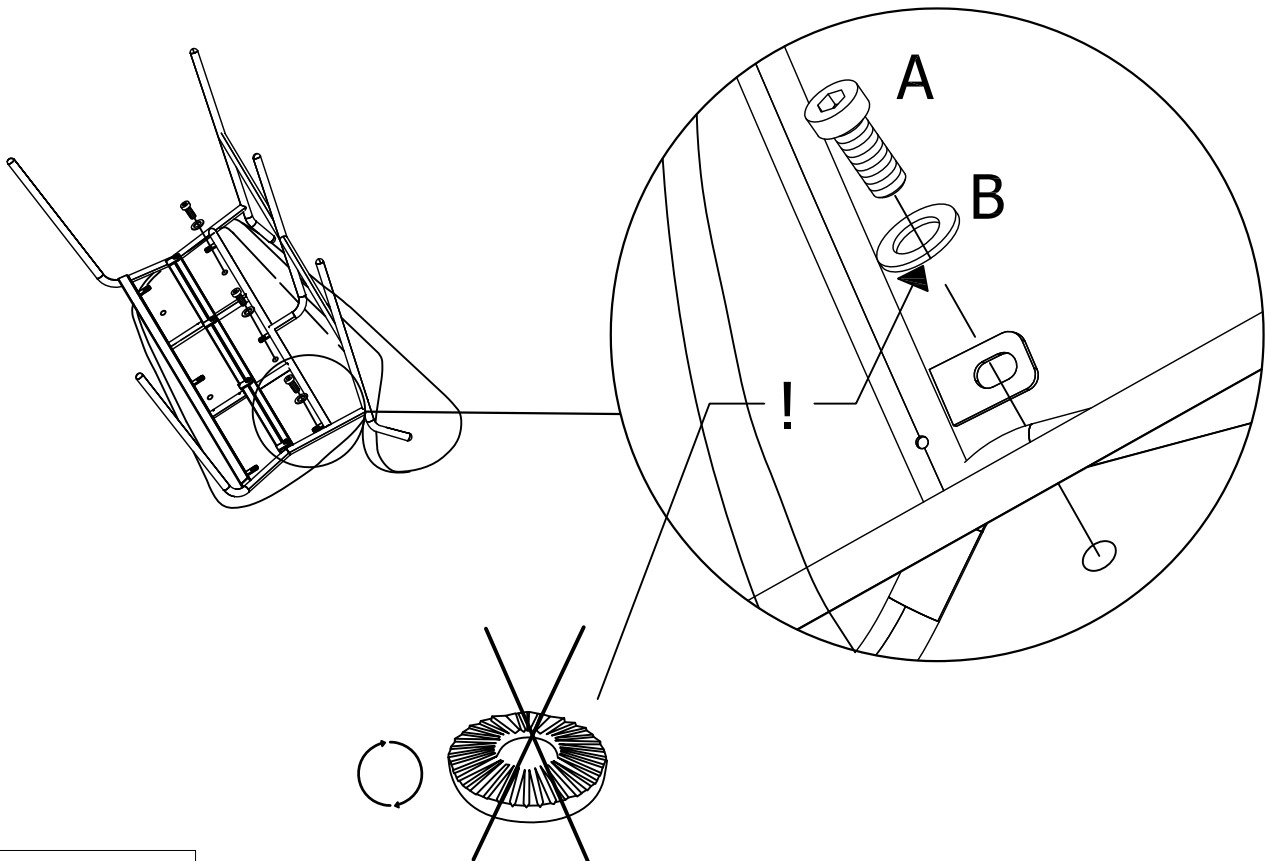





FIG.  
5

x2

		
A x 3	B x 3	C x 1

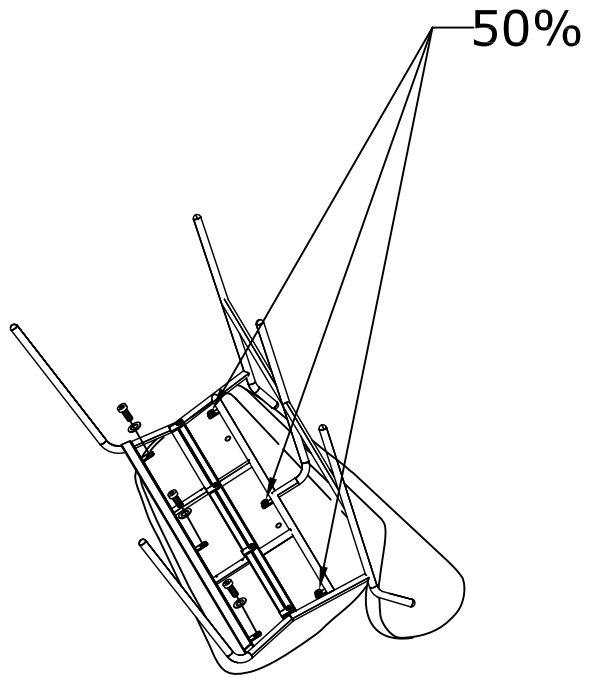


FIG.  
6

x2

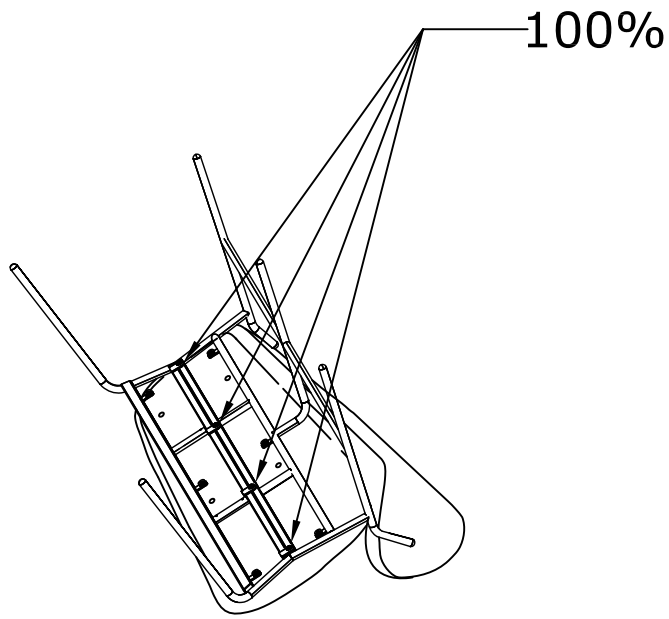


FIG.  
7

👤x2

100%

100%

