



Element

Design by BoConcept

Samlevejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

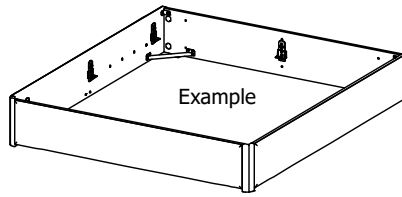

sparepart bag 697000180

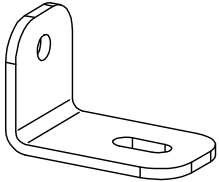


U x 2



V x 4

sparepart bag 697000179

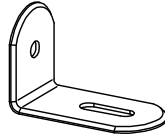

U x 2




V x 4




U x 2 V x 4

Example: 697000180

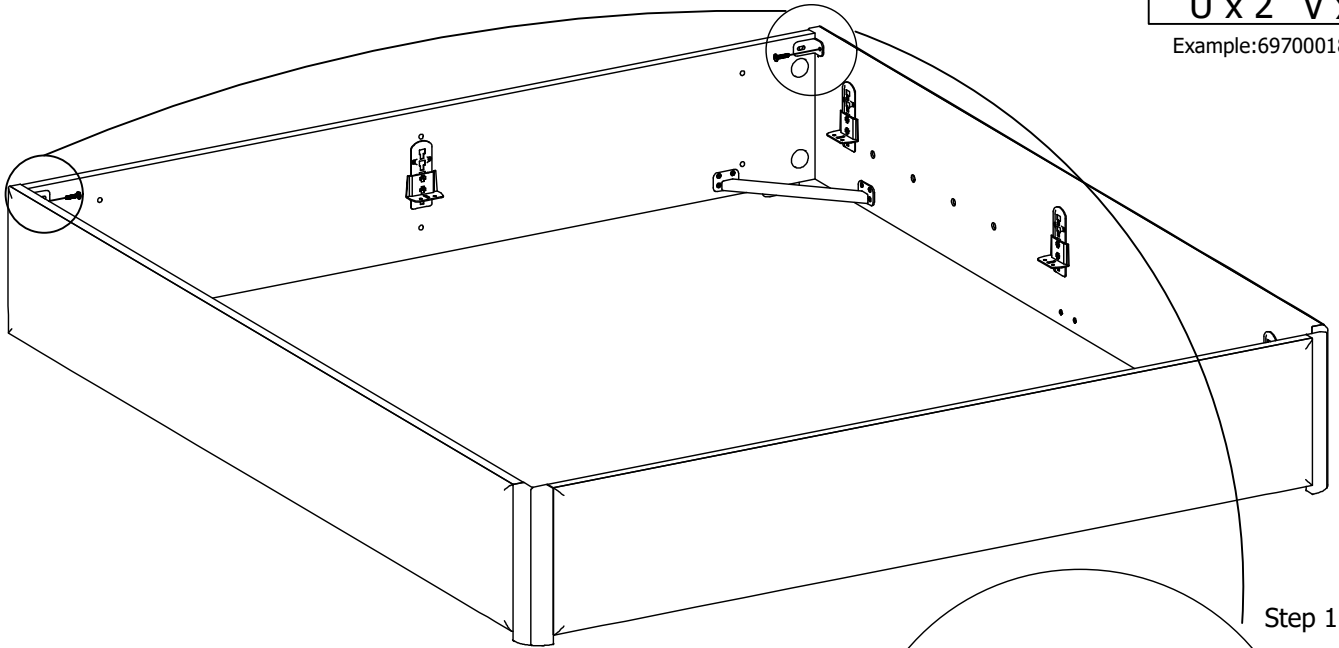

Step 1

step 2

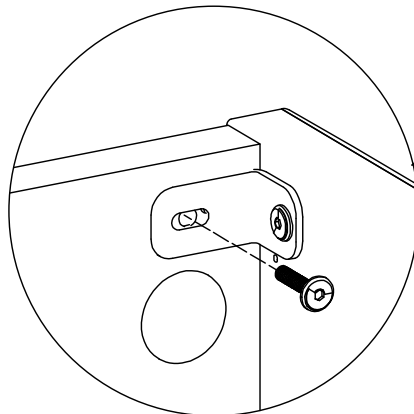

X2

