


# Carmo


Design by BoConcept

Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

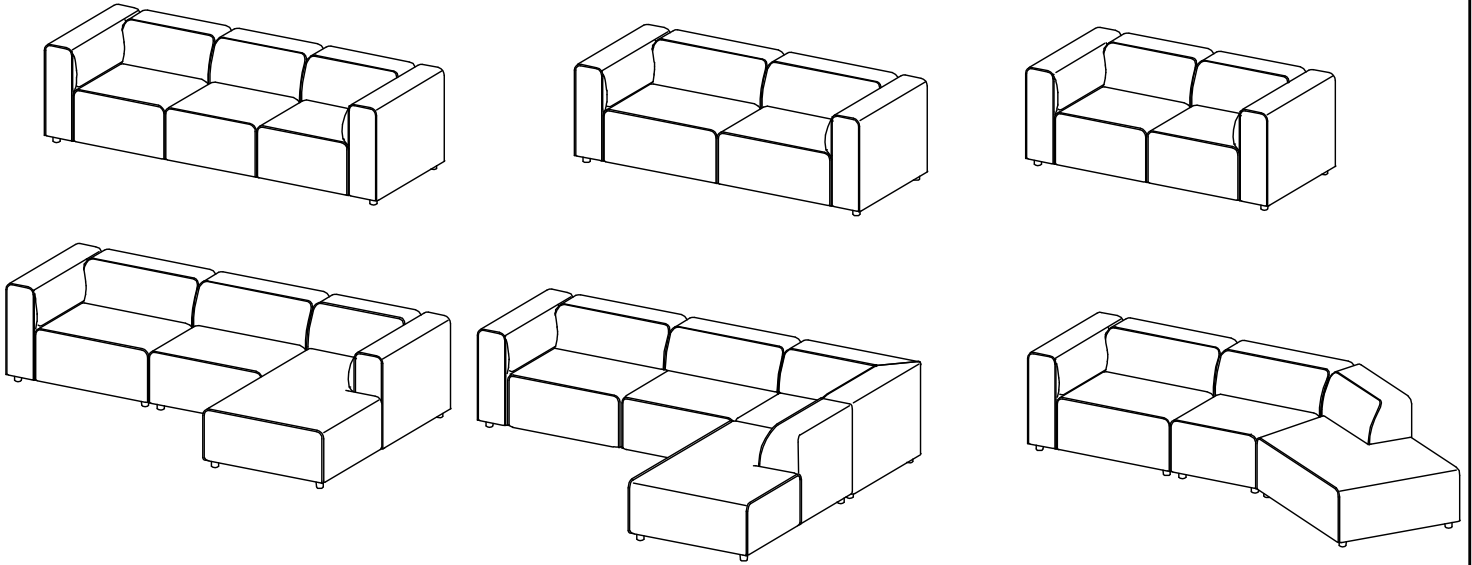

Intended use: General use according to EN16139

Beslag - Beschläge - Fittings - Set de montage  
sparepart bag 697000019



B x 2



C x 20

sparepart bag 697000020

A x 4



A x 4

FIG.  
1

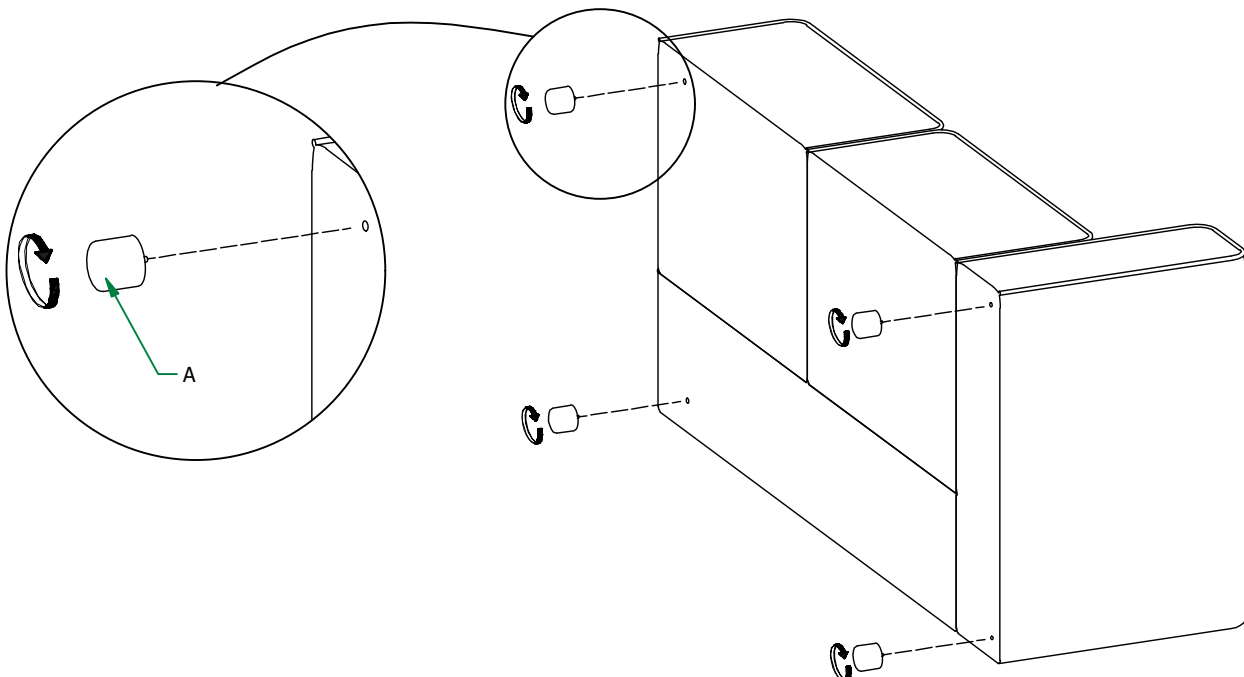


FIG. 2

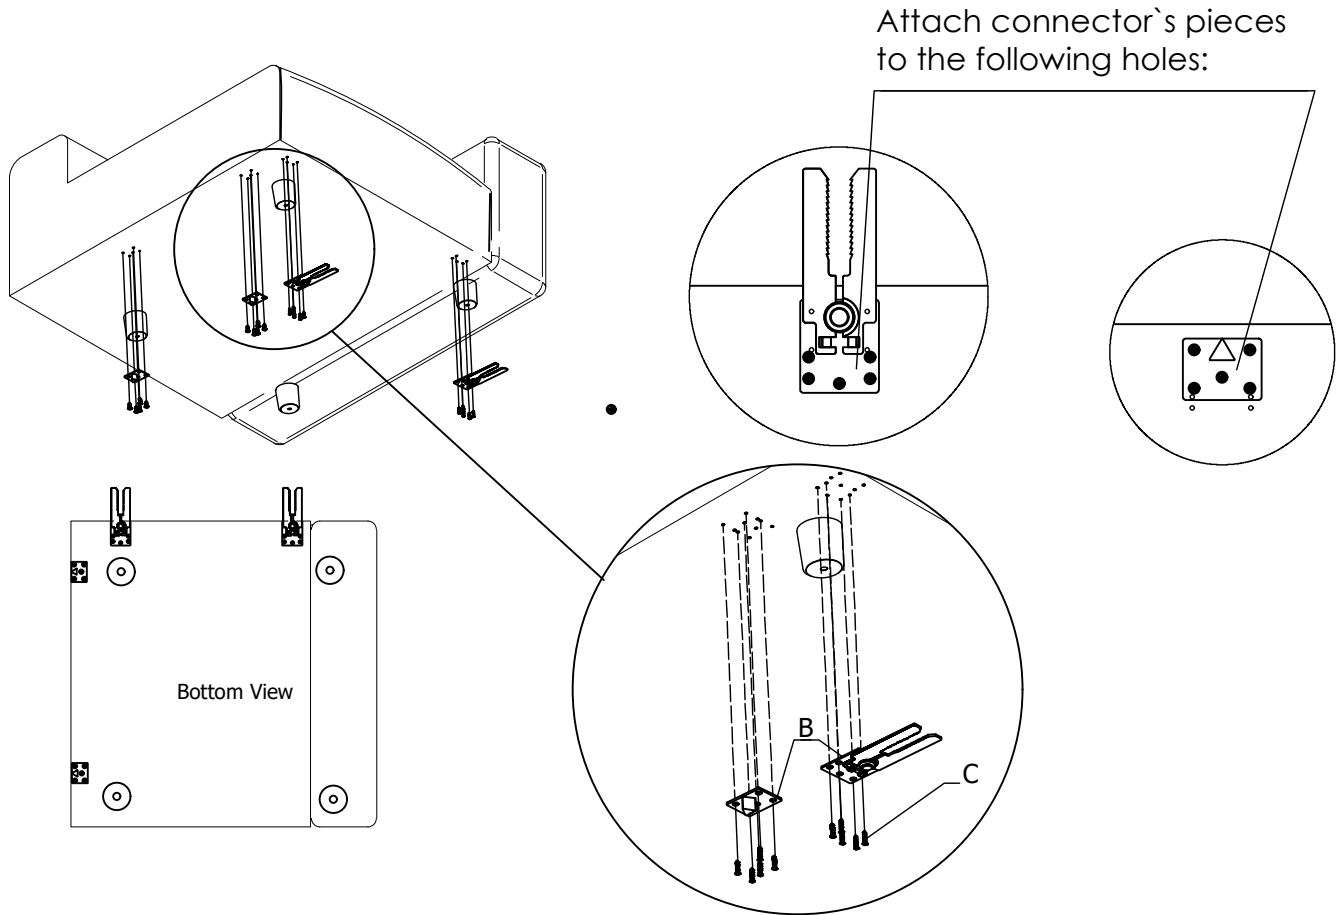


FIG. 3

