
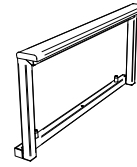


ROME Sunbed


Design by BoConcept

Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

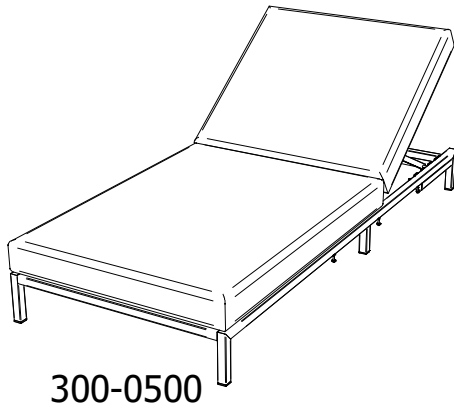


300-0500


1

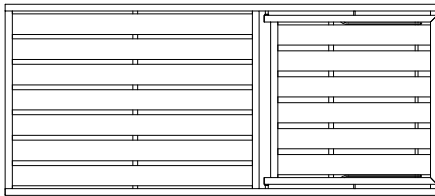

2

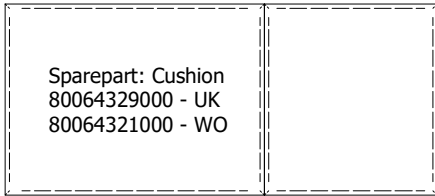


Sparepart bag:
80064330000



Dustcover

300-0510

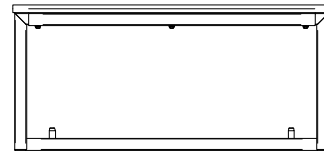

Fittingbag:
937000119

Ax3 Washer D15 d7x1,6mm
Bx3 Spring washer D13 d6,6x1,5 mm



Cx3 Cap screw M6x55



Dx1 Allen key 4x72x28mm

Spareparts:
937000063



Spareparts:
937000146



FIG.
1

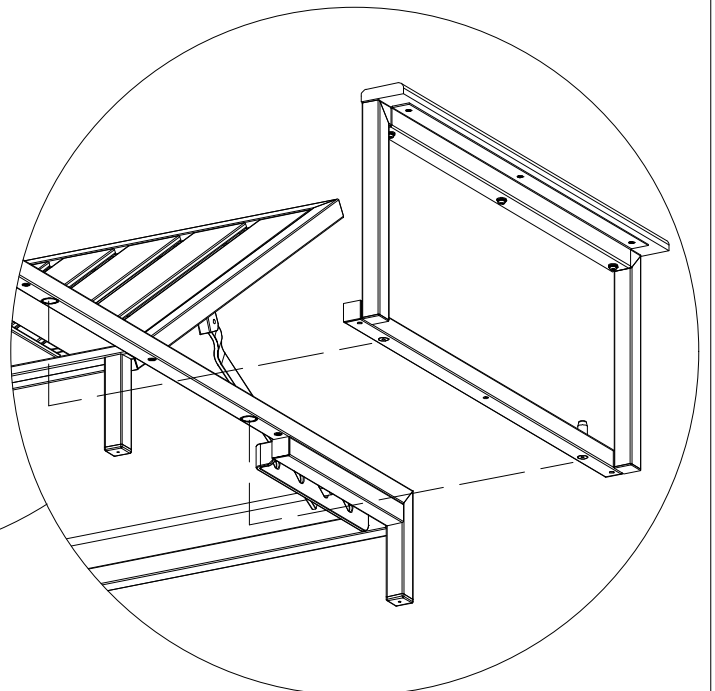
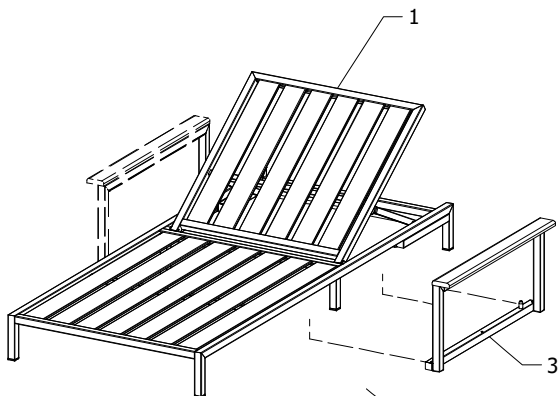


FIG. 2

- Ax3
- Bx3
- Cx3
- Dx1


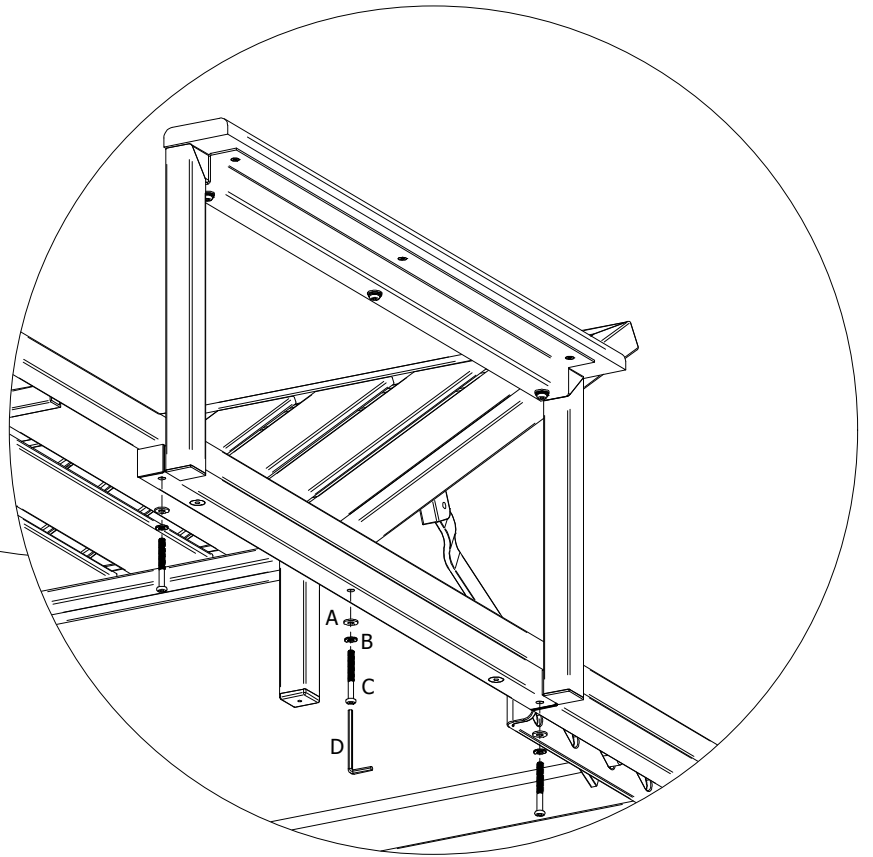


FIG. 3

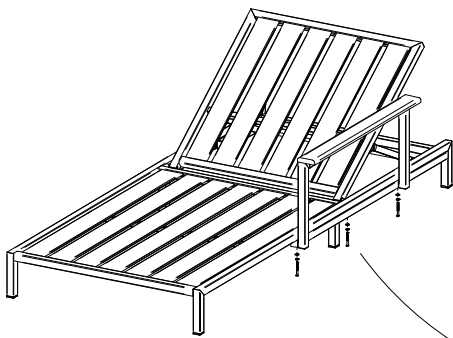