


AUSTIN

Design by BoConcept

Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

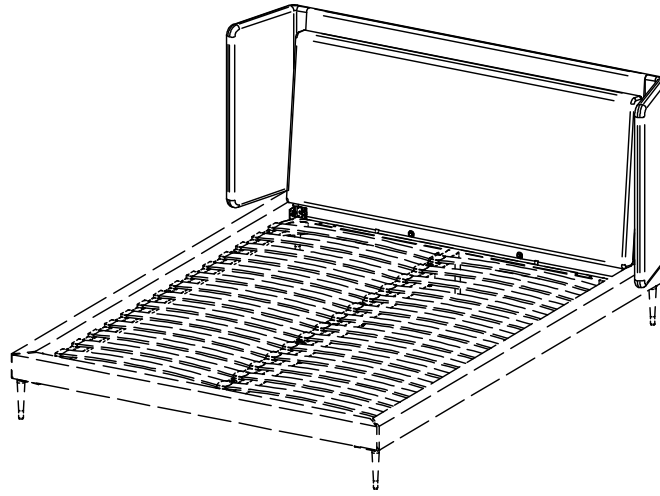

390-8140
390-8150
390-8160
390-8180
390-8190

Coll. 1: 8140, 8150, 8160, 8180, 8190

Beslag - Beschläge - Fittings - Set de montage
No. 937000154






FIG.
1

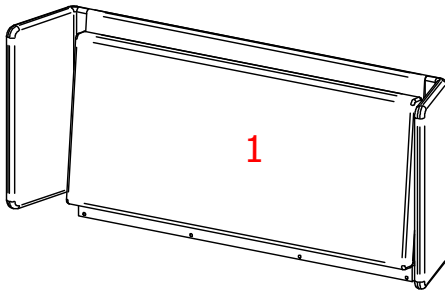

390-1440
390-1450
390-1460
390-1480
390-1490

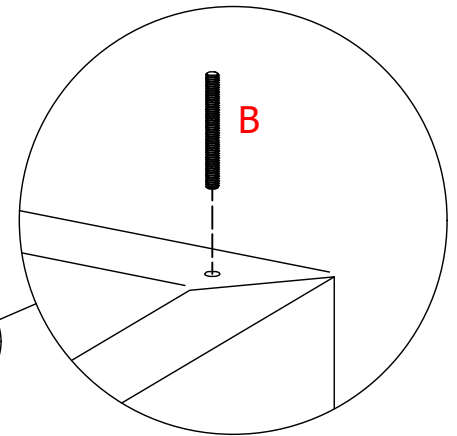
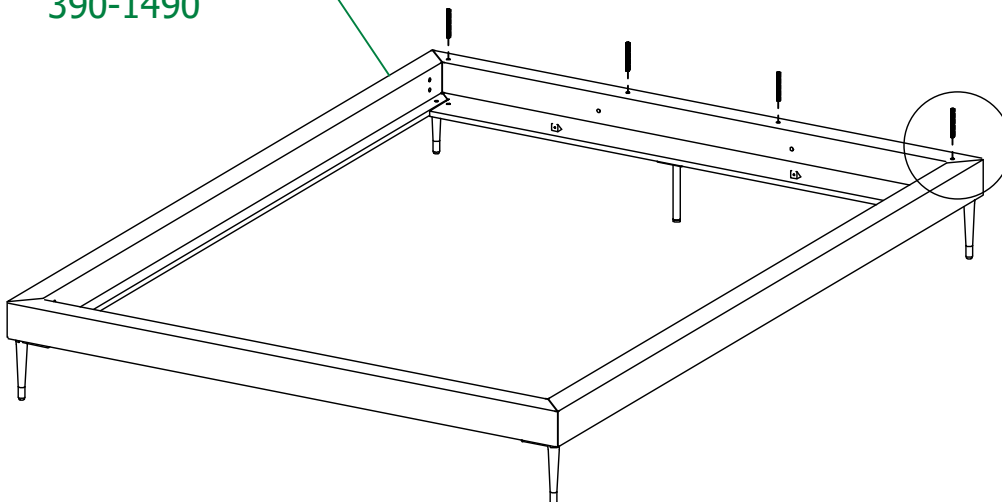


FIG. 2

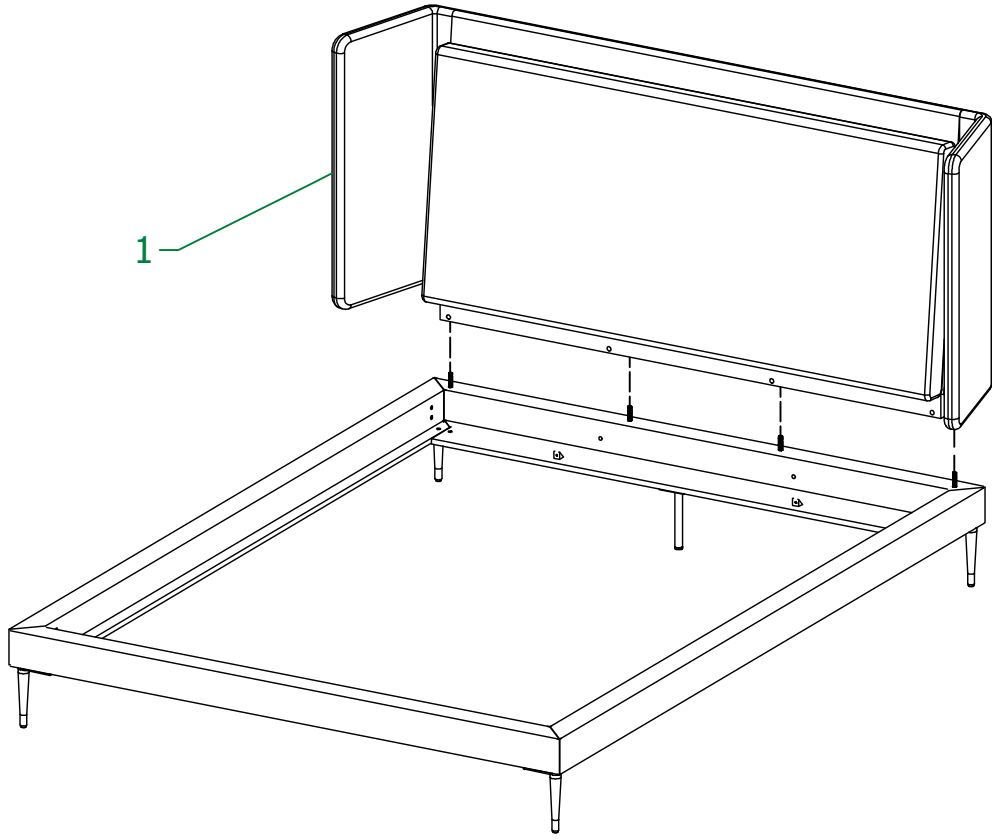


FIG. 3

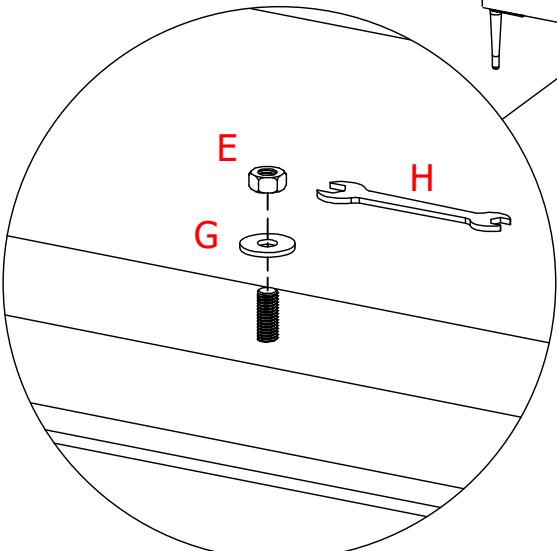
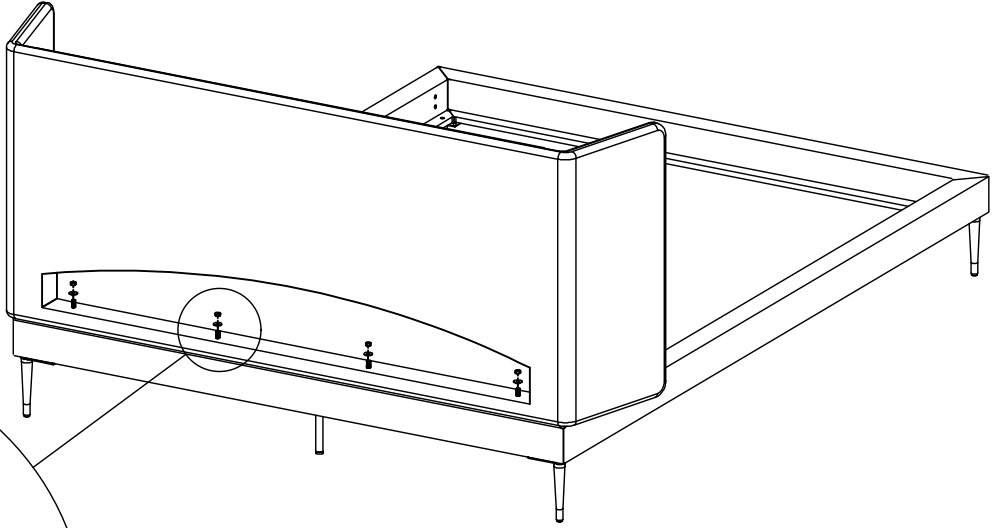
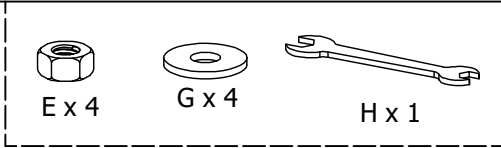


FIG. 4


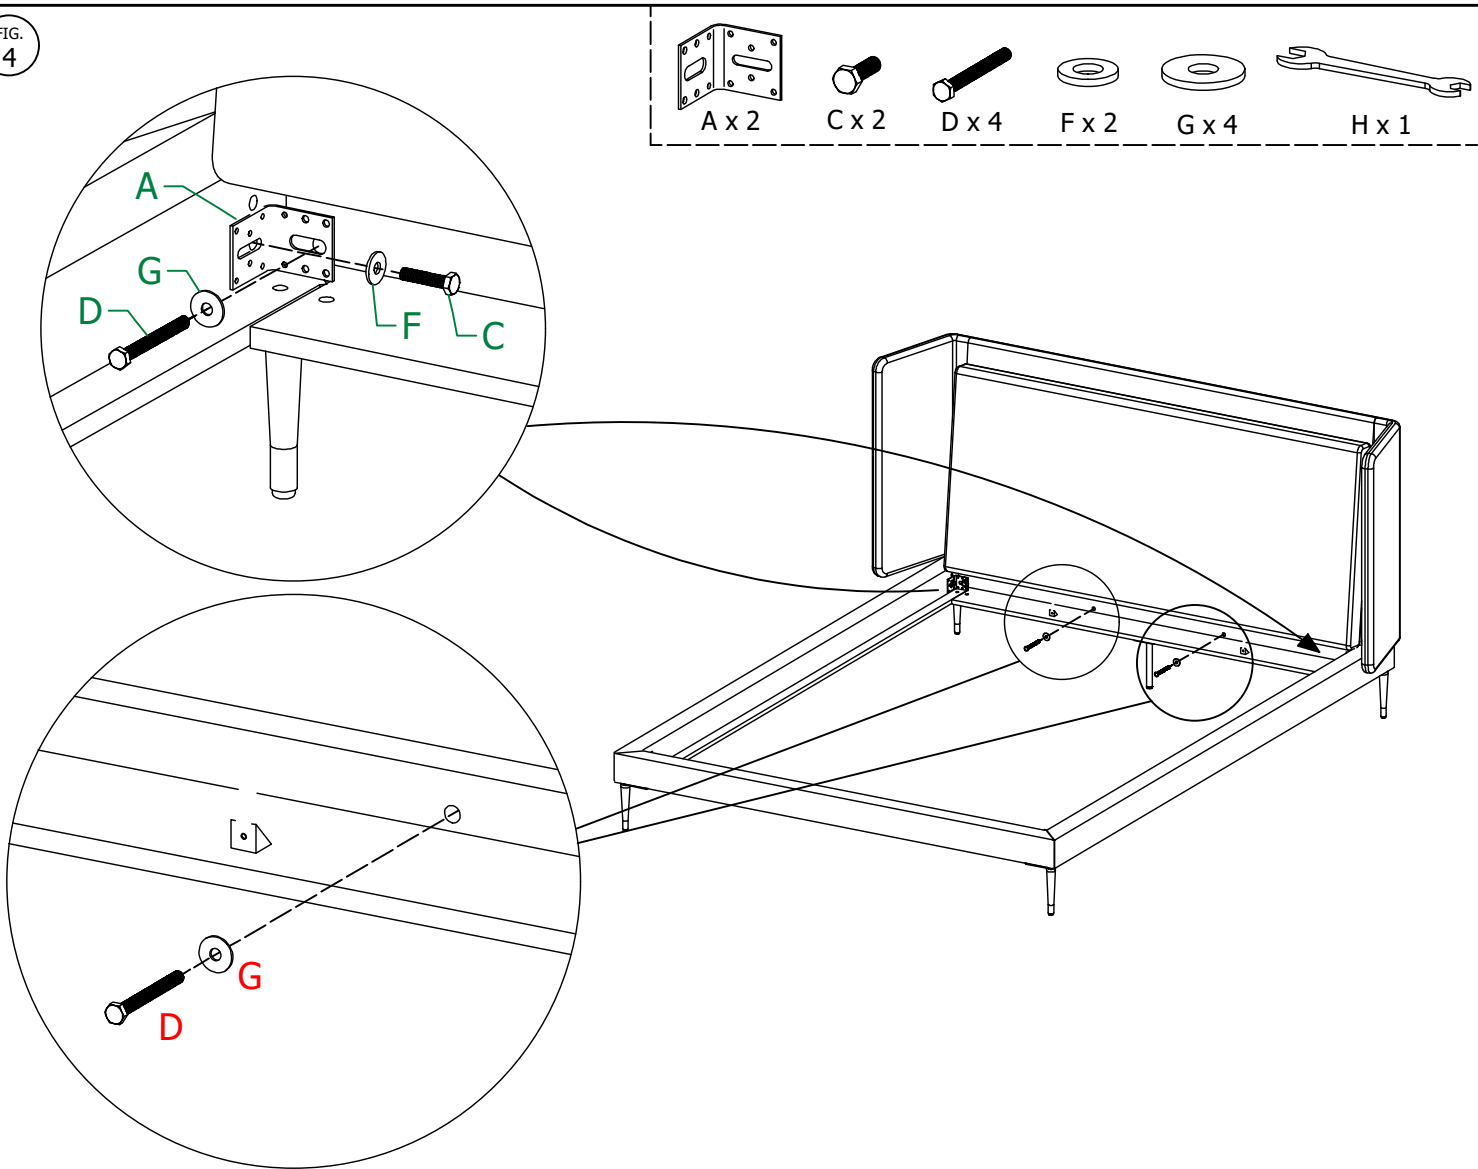


FIG. 5

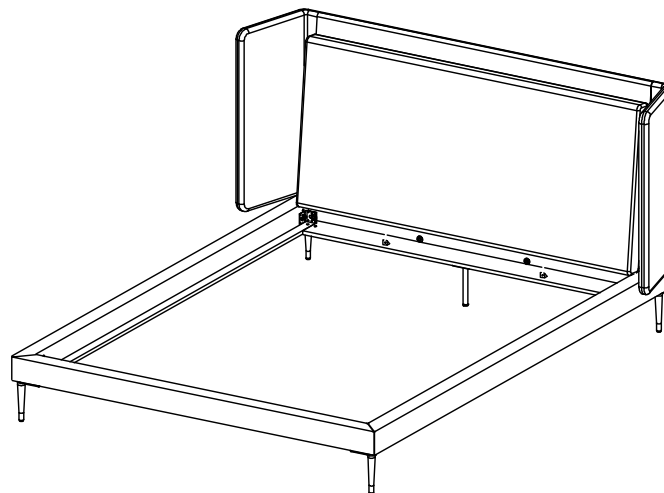

- DK Ved reklamation oplyses følgende:
- D Im Reklamationsfall, bitte folgendes erläutern:
- US In case of claims, please state the following:
- F En cas de réclamation, veuillez indiquer:
- NL Bij service volgene mededelen
- E En caso de reclamación, indicar lo siguiente:
- P No caso de reclamação, por favor indique o seguinte:
- JP お気づきの点等ございましたら、以下の点をお知らせください。

Example!

Korpus - Korpus - Carcase - Carcasse			Beslag - Fittings - Beschläge - Set de Montage		