



Element

Design by BoConcept

Samlevejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

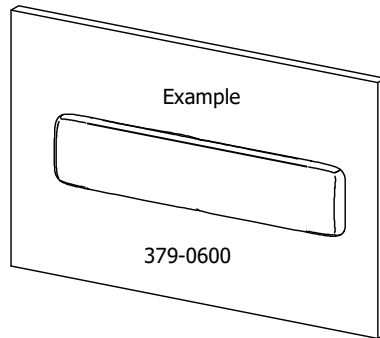

Model:0510 0530 0550 0580 0590 0600

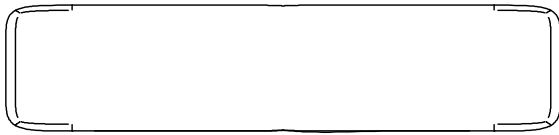

Beslag - Beschläge - Fittings - Set de montage
sparepart bag 697000175



A x 4



B x 4



C x 1

FIG.
1






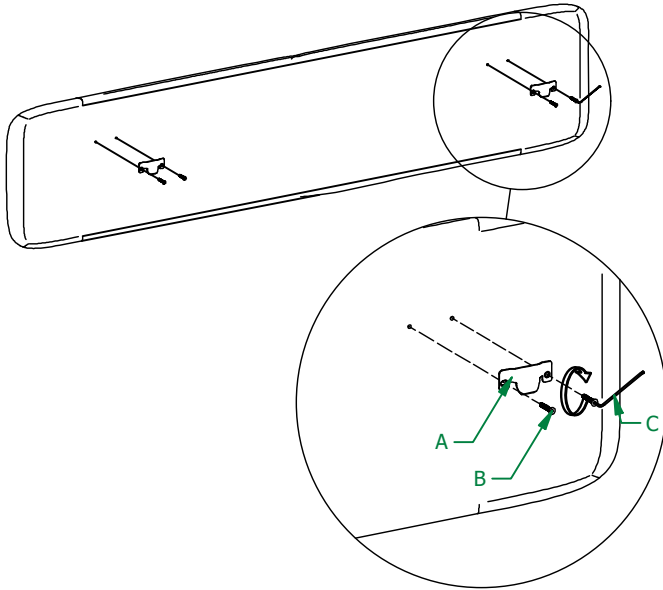


FIG.
2

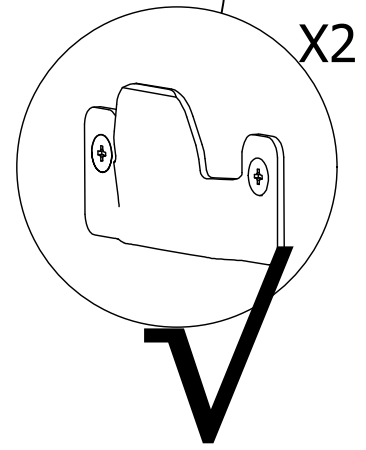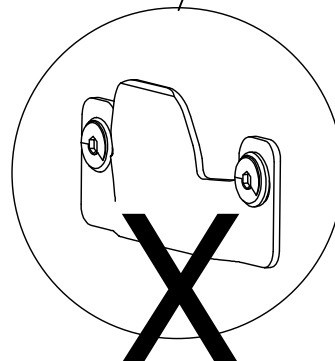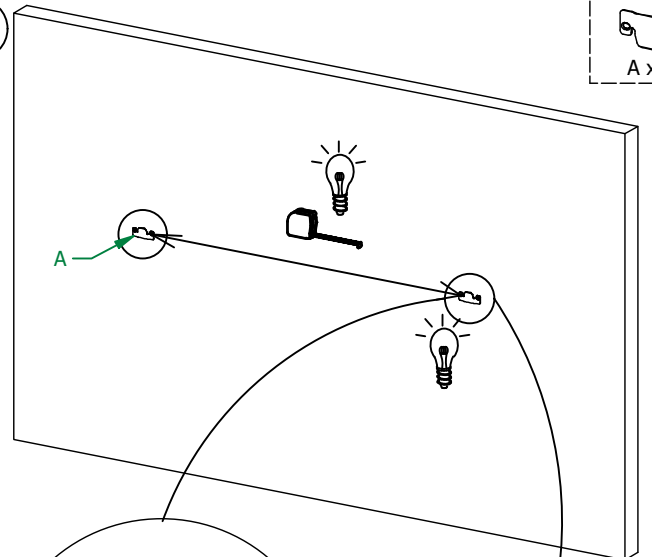

X2

